

Installation Information

Radio interface for 26-pin Accessory Port Connector


Normally open switch connection for emergency signal

Has Ignition Sense wire


External Speaker connection.

If an external speaker is not required, insulate external speaker wires with heat-shrink tubing.

RC-xxMU5 Cable

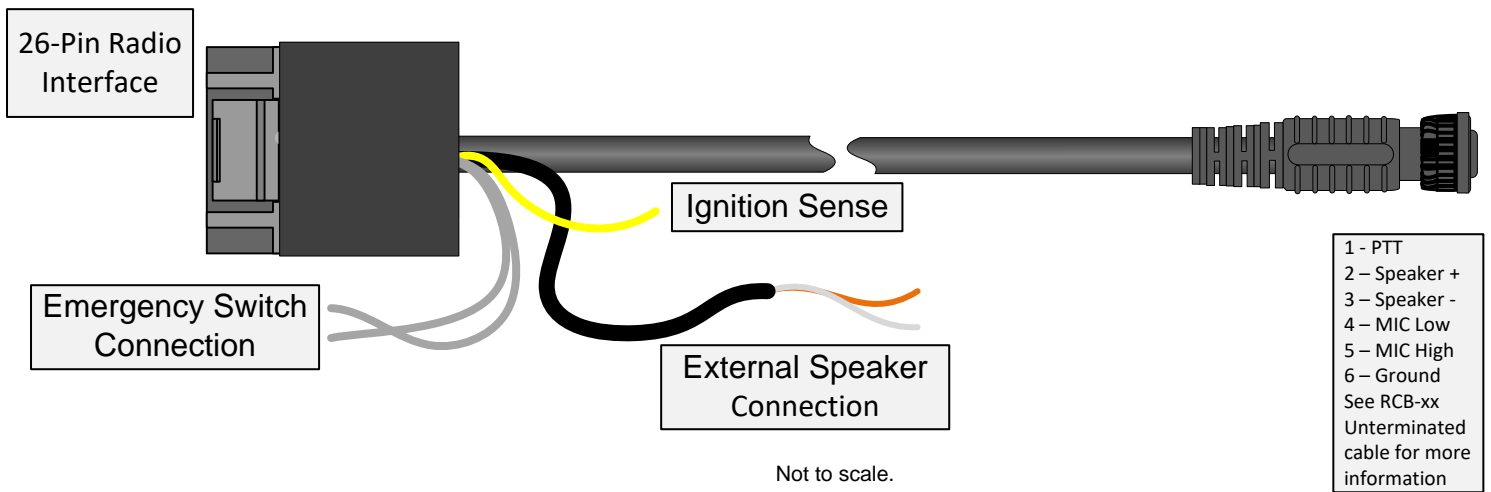

Back View
XPR4300

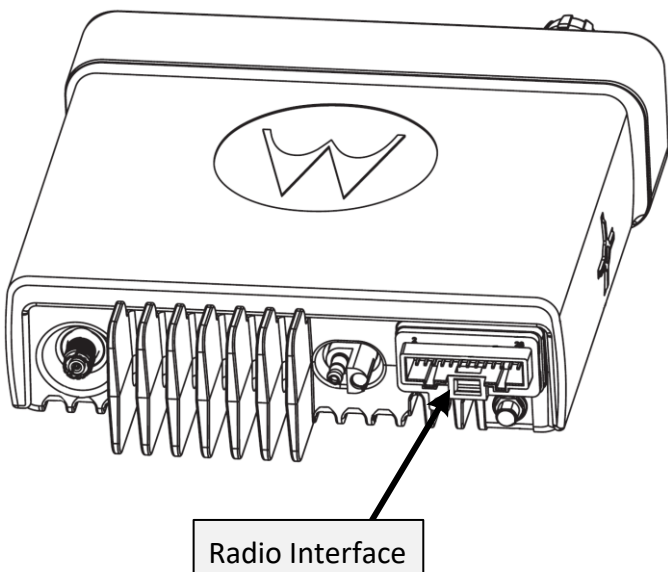

Front View

26-pin connector

