

Installation Information

Radio Interface for 25-Pin Accessory Port Connector on the RF Deck


PTT programmed on EXIO18, DB25 pin 18
Radio must be programmed for this PTT input.

If an external speaker is not required, insulate external speaker wires with heat-shrink tubing.

RCB-xxYB Cable

25-Pin Radio Interface

External Speaker connection

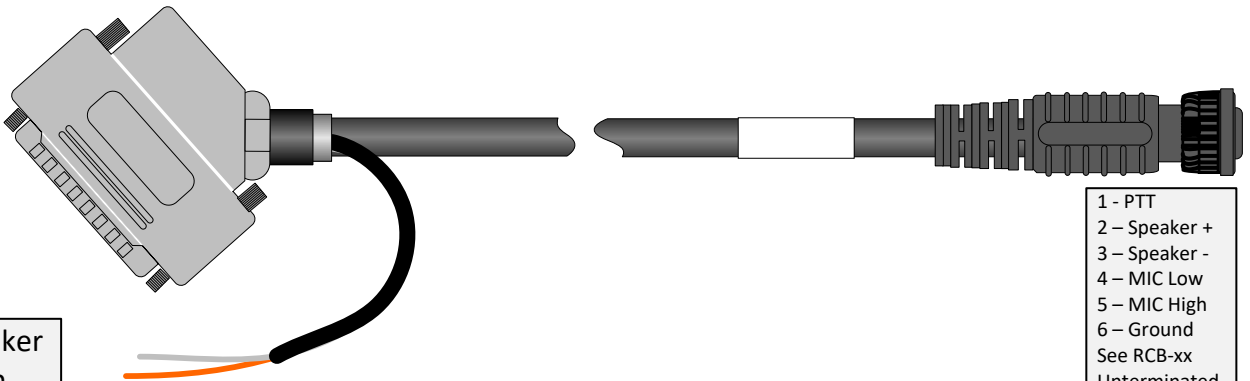


- 1 - PTT
- 2 - Speaker +
- 3 - Speaker -
- 4 - MIC Low
- 5 - MIC High
- 6 - Ground
- See RCB-xx
- Unterminated
- cable for more
- information

Not to scale.

Rear View

Radio Interface

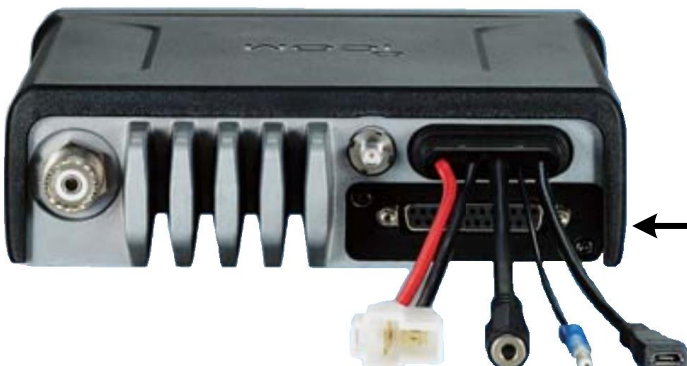

25-Pin Connector

Front View

