

LiberatorMAX MIC Description and Placement

The boom mic used on LiberatorMAX headsets have 2 elements. If you remove the windscreen you will see it has a front and back element. The element on the back is not used. The front element is labeled 736 "TALK" and has an arrow: it must be facing the lips as shown below. Be sure the element is not turned 90 degrees or more, also: position 1/8-1/2 inches away from the lips for best performance.

Note: If the mic is positioned incorrectly, the quality of the Receive & Transmission will be compromised - For Receive you will hear/pick up more background/ambient noise and this may sound like an echo or other unwanted noise. For Transmission it may be weak/low with more ambient noise, and in some cases it may not transmit any voice.

